
## SEE PREMIER DESIGN MANUAL FOR HEADER CHART FOR CAPACITIES

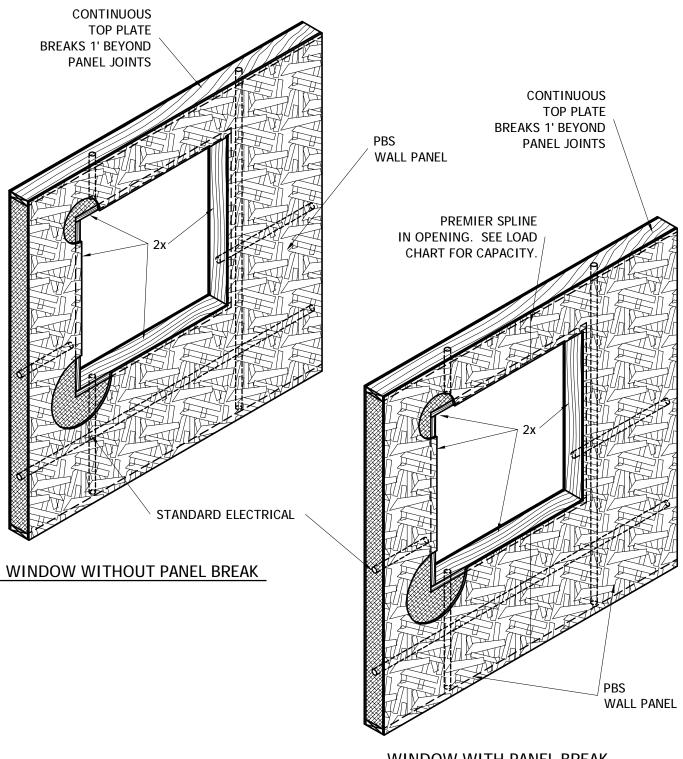

WINDOW WITH PANEL BREAK